

Pumpkin Pitch


Safety Instructions

1. Be sure that there is plenty of clearance between the player and spectators.
2. Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected or errant throw.
3. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
4. NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!
5. Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down causing injury.
6. Use only the character figures included with the game.

Pumpkin Pitch

Packing List

<u>Description</u>	<u>Quantity</u>
Canvas	1
“Four-Way” Fittings	2
“Elbow” Fittings	2
Lengths of Tubing 44.5” (<i>Swedged</i>)	4
Lengths of Tubing 41.5” (<i>Unswedged</i>)	4
Lengths of Tubing 36” (<i>with rubber tips</i>)	4
Stakes	4
Pumpkin Koosh Balls	12
Carrying Case	1

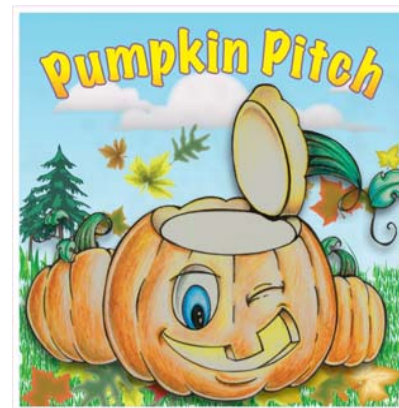

TWISTER DISPLAY

PO Box 2704

East Liverpool, OH 43920

Phone: 330-386-1270 Fax: 330-386-0418

Order Desk: 800-637-3656

Email: sales@twisterdisplay.com

Pumpkin Pitch

Assembly Instructions

1. Select a level area to operate game with plenty of room to allow for a line to form.
2. Assemble framework, per sketch. Note that the eight longer pieces of tubing are used to form the sides (2 per side) while the four shorter crimped pieces are to be used to create the base. (Be sure to tighten down the fittings using the small bolts on them.)
3. Attach canvas to the framework using the Velcro straps.
4. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
5. Never fold up canvas wet. Always allow to dry thoroughly first. [**NOTE:** Your canvas may be powdered to prevent it from sticking together during shipment. Simply remove powder with a dry cloth.]

Canvas Care

1. If game becomes wet, dry thoroughly before storing.
2. Fold the canvas INWARD to help protect and keep it clean.
3. Canvas can be cleaned with rubbing alcohol when necessary. If your game involves velcro, clean the hook and loop fabric with dry brush to knock out the dirt. If velcro fabric is badly soiled, use upholstery cleaner.

Frame Set-Up

