

Sombrero Toss Safety Instructions

1. Be sure that there is plenty of clearance between the player and spectators.
2. Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected or errant throw.
3. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
4. **NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!**
5. Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down causing injury.
6. Use only the character figures included with the game.

Sombrero Toss Packing List

<u>Description</u>	<u>Quantity</u>
BACK CANVAS 7' x 7'	1
FRONT CANVAS 42" x 7'	1
"FOUR-WAY" FITTINGS	2
"ELBOW" FITTINGS	4
"TEE" FITTINGS	2
"THREE-WAY" FITTINGS	2
LENGTHS OF TUBING 44.5" (<i>SWEDGED</i>)	4
LENGTHS OF TUBING 41.5" (<i>UNSWEDGED</i>)	6
LENGTHS OF TUBING 36" (<i>w/rubber tips</i>)	2
RIGHT POLE ASSEMBLY (<i>Swedged Pipe</i>)	1
LEFT POLE ASSEMBLY (<i>Unswedged Pipe</i>)	1
LENGTHS OF TUBING 24"	4
STAKES	4
SOMBREROS	6
12" WOODEN POLES	3
CARRYING CASE	1

TWISTERDISPLAY
P.O. BOX 2704
EASTLIVERPOOL, OH 43920
PHONE (330) 386-1270 FAX (330) 386-0418
ORDERDESK: (800) 637-3656
EMAIL sales@twisterdisplay.com

Sombrero Toss Assembly Instructions


1. Select a level area to operate game with plenty of room to allow for a line to form.
2. Assemble the framework, per photo. Note that the eight longer pieces of tubing are used to form the frame for the back canvas (2 per side). Slide a "Tee" Fittings onto each side of the back canvas frame. These fittings join the front frame to the back. Insert the 24" lengths of pipe into the ends of each "Tee" Fitting and the ends of the 4-Way Fittings on the bottom of the frame.
3. Attach the left pole assembly to the 24" pipe. Insert the right pole assembly (swedged pipe) into the left pole assembly and attach the end of the right pole assembly to the 24" pipe. Screw the 3 poles into the assembly.
4. Place the two shorter rubber-tipped pieces into the 4-Way fittings at the back of the game. These create the base. (Be sure to tighten down the fittings using the small bolts on them.)
5. Attach canvas to the framework using the Velcro straps.
6. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
7. Never fold up canvas wet. Always allow to dry thoroughly first. [**NOTE:** Your canvas may be powdered to prevent it from sticking together during shipment. Simply remove powder with a dry cloth.]

CANVAS CARE

1. If game becomes wet, dry thoroughly before storing.
2. Fold the canvas INWARD to help protect and keep it clean.
3. Canvas can be cleaned with rubbing alcohol when necessary. If your game involves velcro, clean the hook and loop fabric with dry brush to knock out the dirt. If velcro fabric is badly soiled, use upholstery cleaner.

To Order Call: 1-800-637-3656

FRAME SET-UP

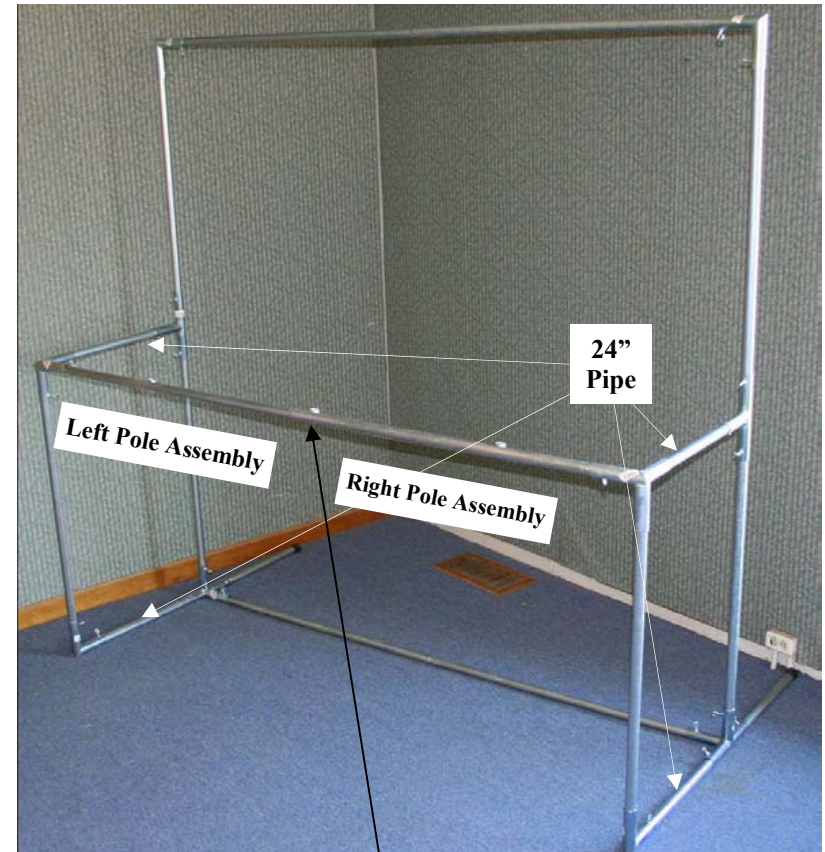

Attach the wood pole
to the pole assembly.

Twister Display