

1 on 1 HOOPS



Set-Up Instructions

www.twisterdisplay.com

Packing List



A

46"



B

38"



C

38"



D

36"



E

36"
(Hinged)



F

24"




G

8"




H


7.45"

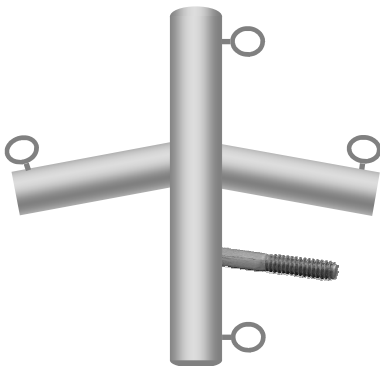

Fitting #2
(4-Way
with 1/2"
Bolt)

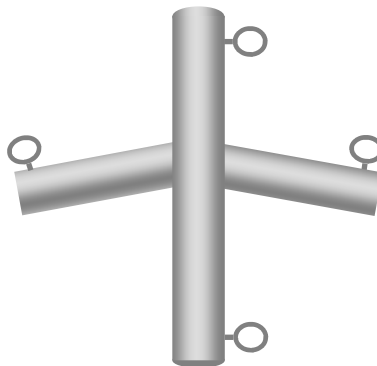

Fitting #1
(4-Way)

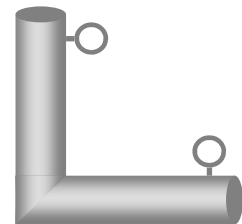

Fitting #4
(Elbow)




Fitting #3
(Coupler)



Packing List



Part	Quantity
A Pipes	4
B Pipes	6
C Pipes	4
D Pipes	2
E Pipes (with hinge)	2
F Pipes	2
G Pipes (corner feet)	4
H Pipes (middle feet)	2
#1 Fittings	2
#2 Fittings	4
#3 Fittings	6
#4 Fittings	2
5/16" x 1" Hex Bolts	8
5/16" Lock Nuts	8
5/16" Flat Washers	8
1/4" x 2 1/2" Hex Bolts	4
1/4" Lock Nuts	4
1/4" Flat Washers	4
8 x 1/2" Pan Head Screws	12
Backboard	1
Electronic Scorekeeper (W/4 Sensors)	1
Mini-Basketballs	6
Rims	2
Nets	2
Ball Ramp	1
A/C Adaptor	1
Needle Valve	1

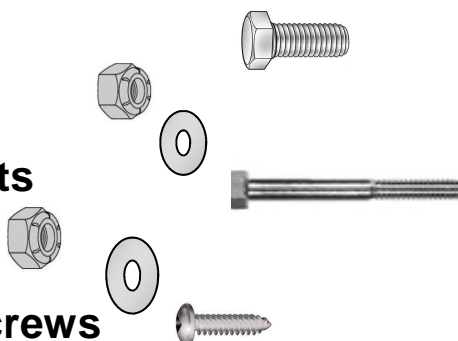

Attach both D pipes to the back of the backboard with the four 1/4" hex bolts.


Put a flat washer on each bolt and insert through the front of the backboard, and then the holes in the D pipes.

Attach both C pipes to the D pipes using two 3/8" x 3" hex bolts and lock nuts.

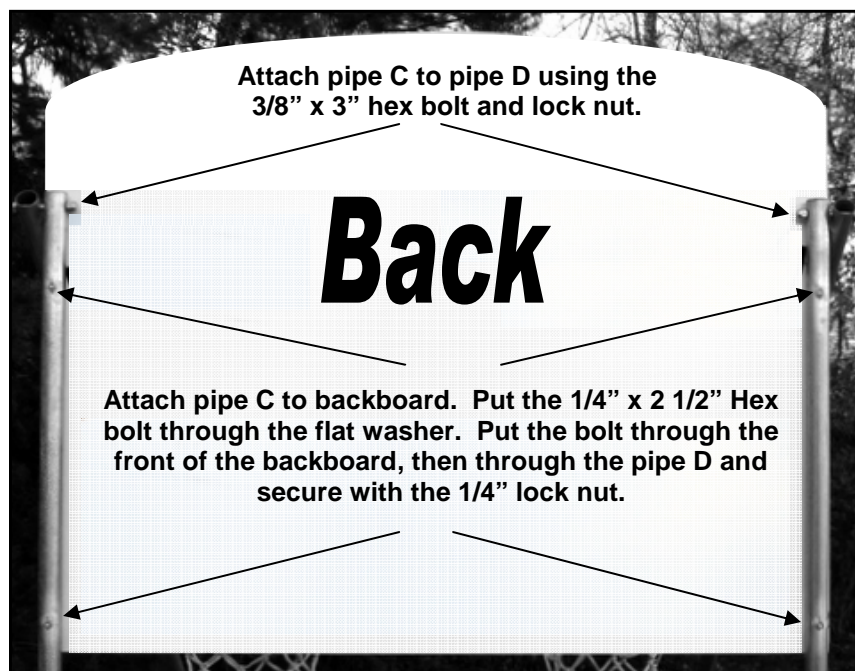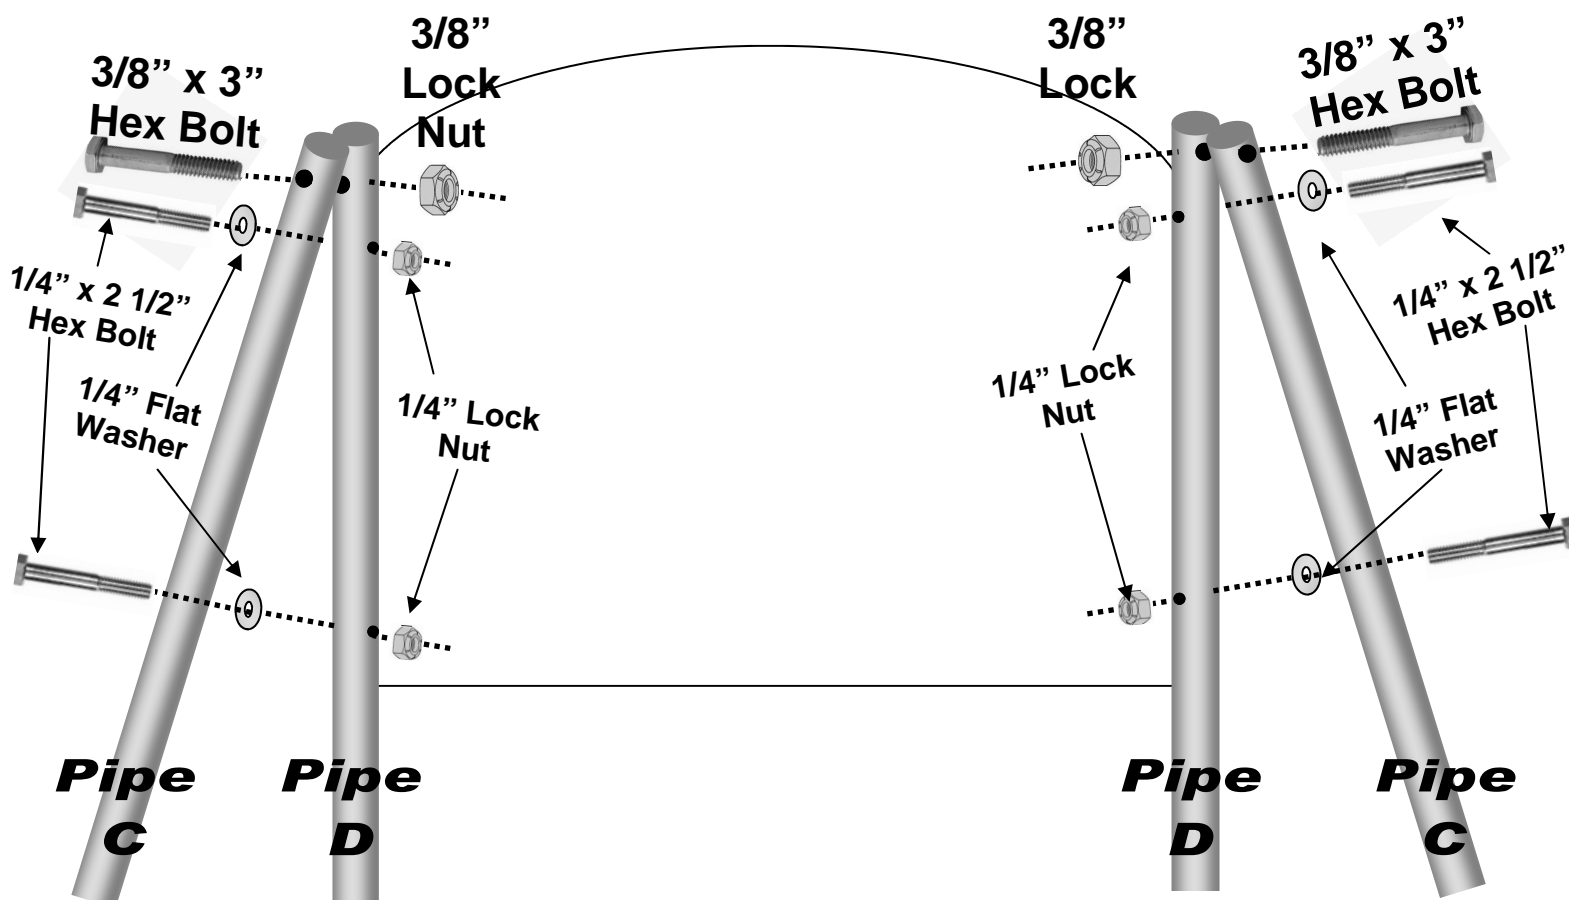


Assembly Instructions

Attach the digital display and sensors to the backside of the backboard with the panhead screws as shown here.

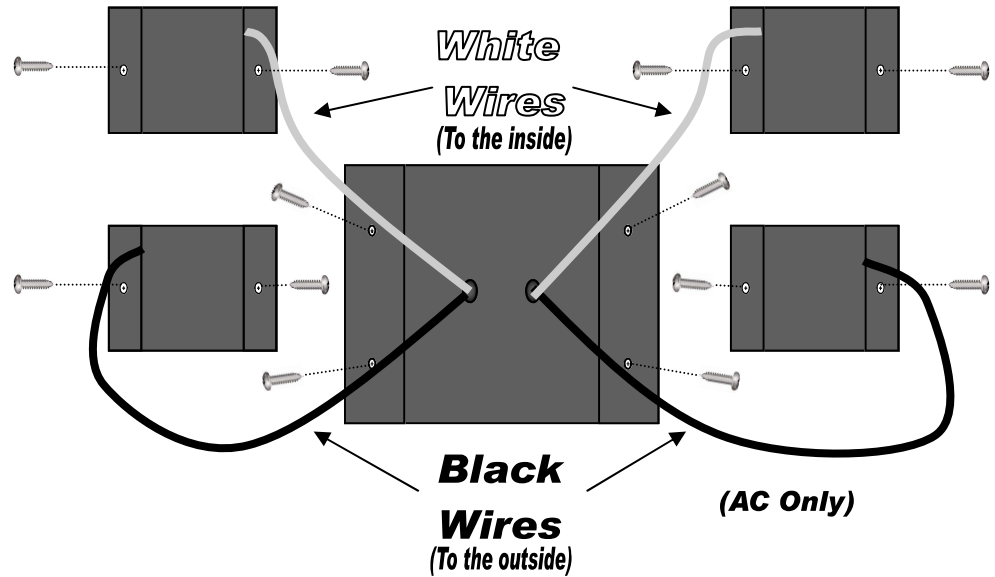


NOTE: Be sure to orient the digital display right side up, and attach the sensors with white wires to the top positions. The bottom wires (black) are positioned toward the outside of the scoreboard as shown.

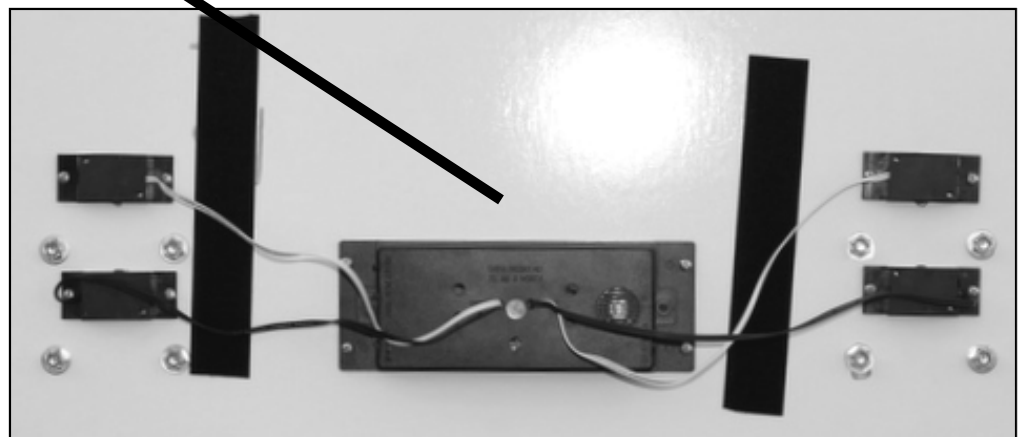



Assembly Instructions




Attach the rims with the 5/16" hex bolts. Insert the bolts through the hole in the rim bracket and through the front of the backboard. Place flat washers and 5/16" lock nuts on the back.

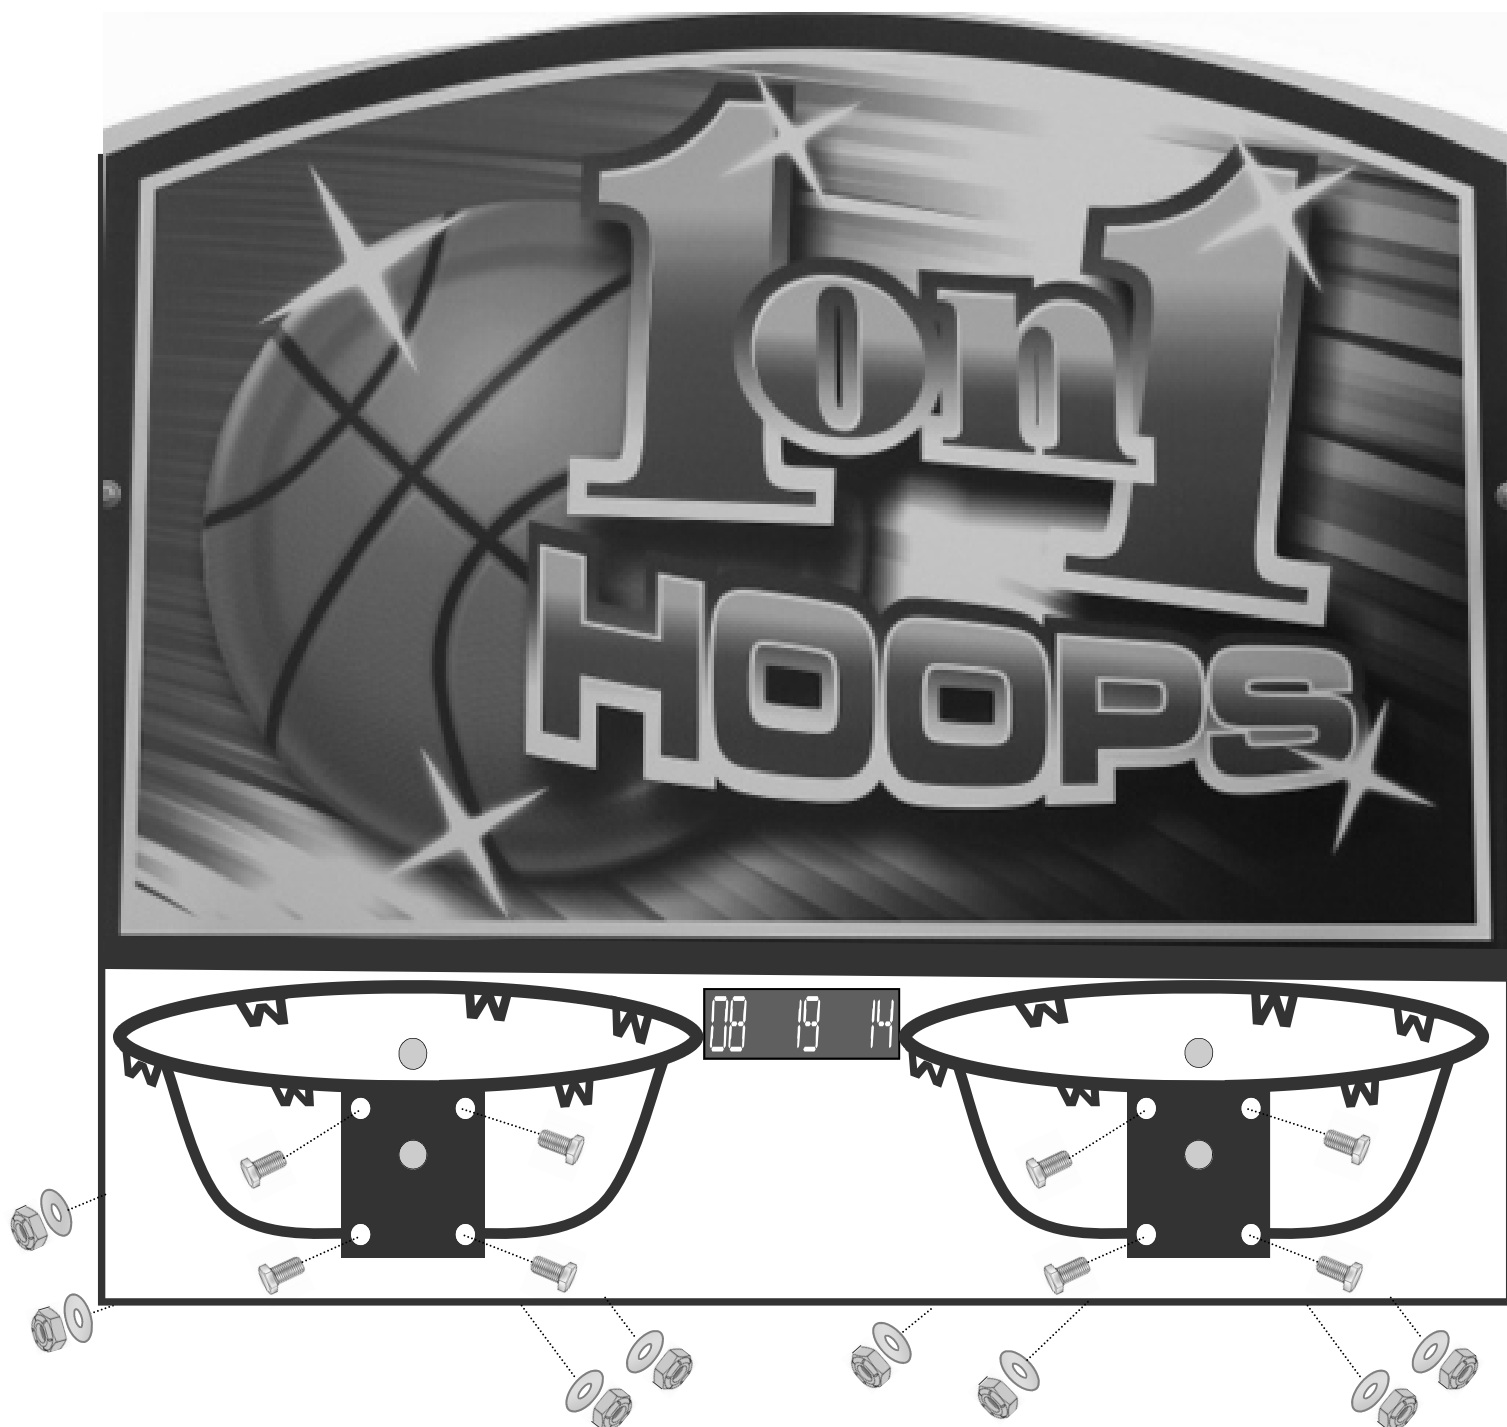




Assembly Instructions

Assemble framework per illustrations below.

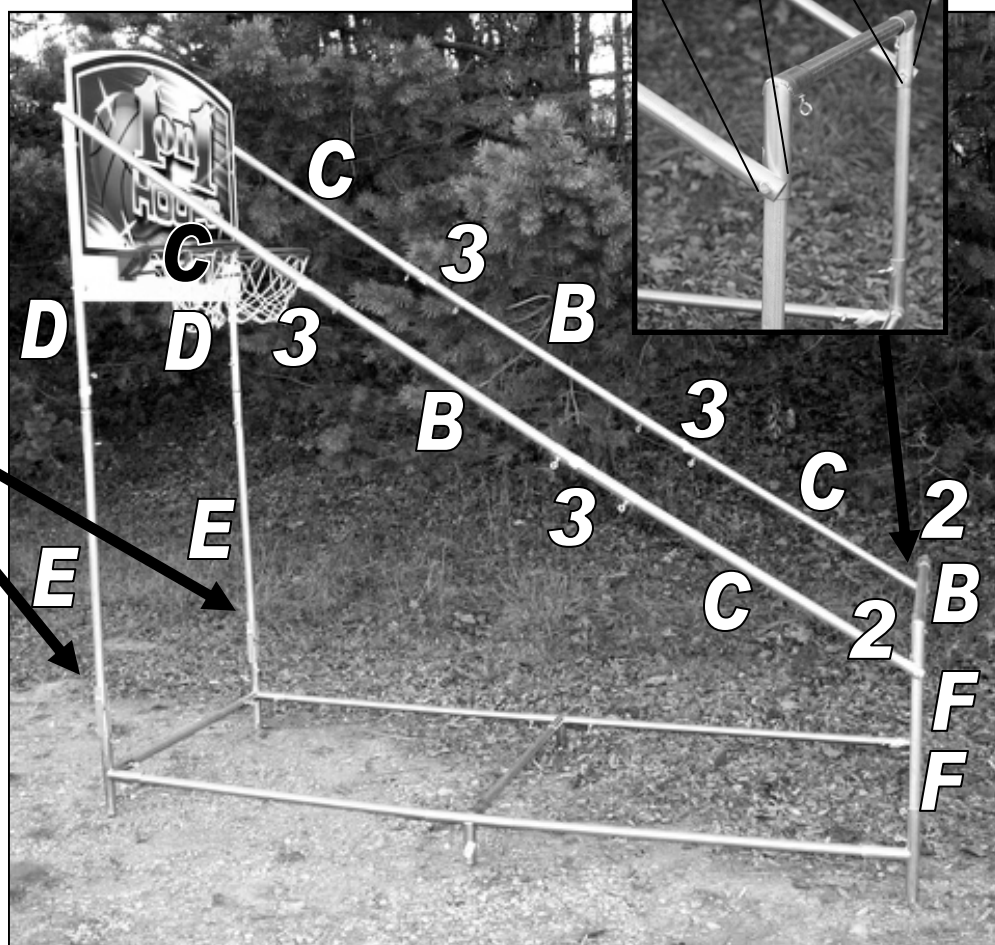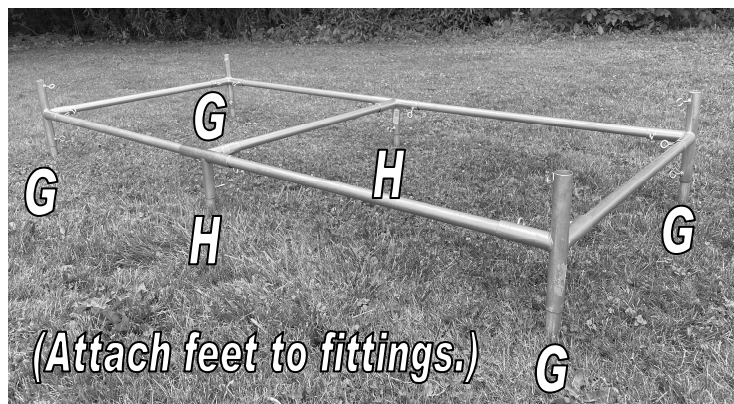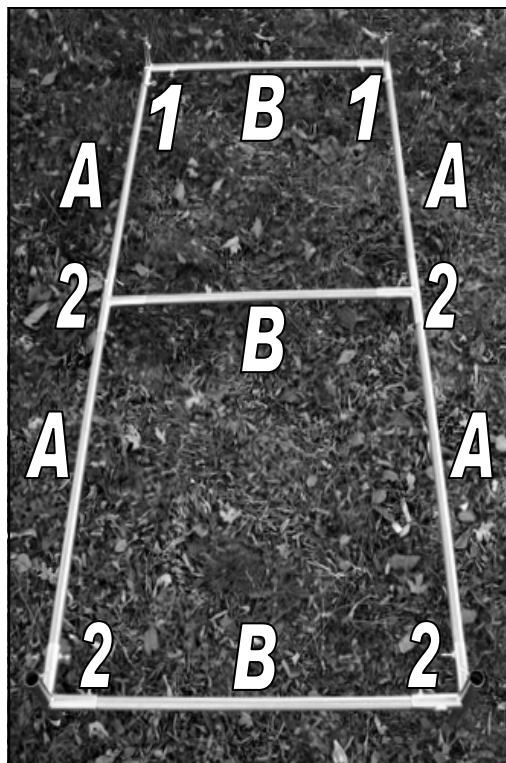




Assembly Instructions

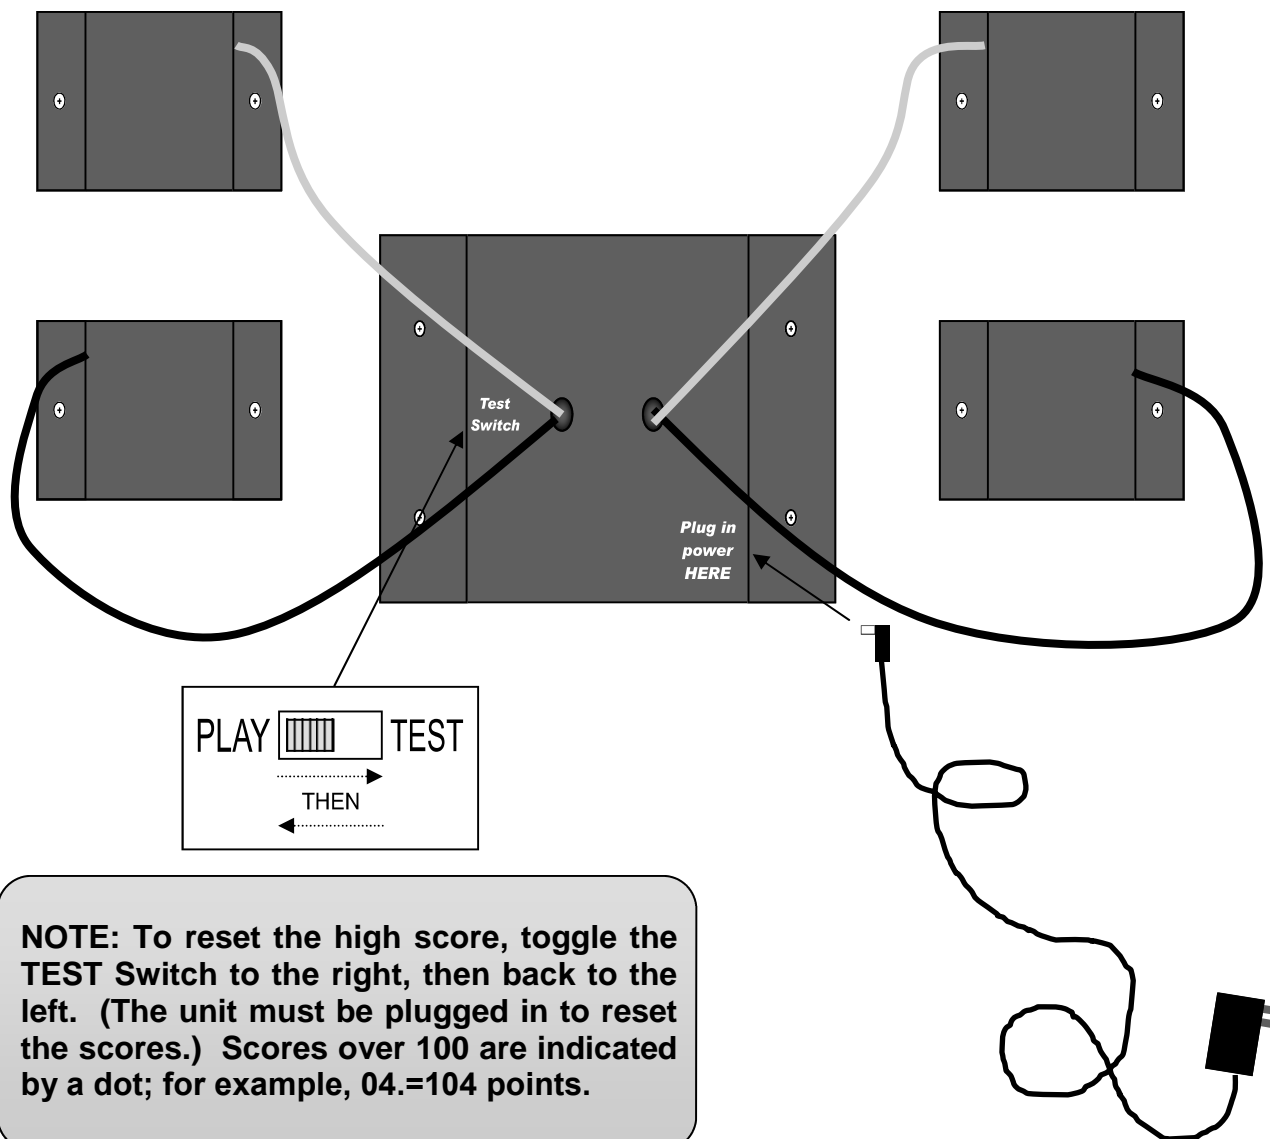

NOTE: To reset the high score, toggle the TEST Switch to the right, then back to the left. (The unit must be plugged in to reset the scores.) Scores over 100 are indicated by a dot; for example, 04.=104 points.



1 on 1
HOOOPS

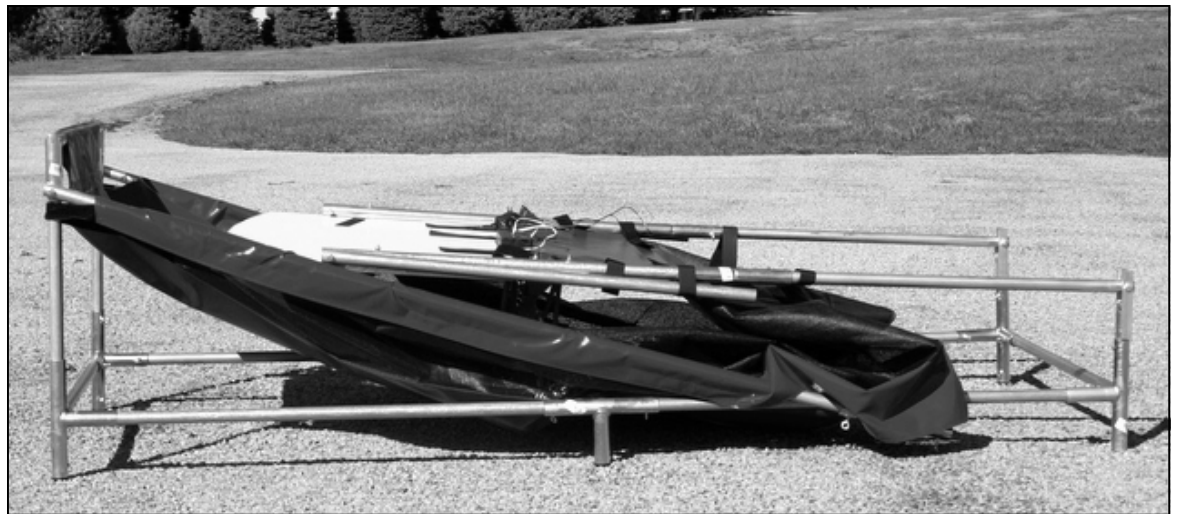

Loosen a coupler on either side of ramp
in order to fold game.

1 800 637 3656 ~ www.twisterdisplay.com



SAFETY WARNING



Safety Instructions

Use only under adult supervision.

Do not allow anyone to climb on unit. The ball ramp and frame are not designed to support a person's weight.

Do not use in rain or in wet areas.

Be sure that there is plenty of clearance between the player and spectators.

Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected or errant throw.

NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!!

Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down, causing injury.

Use only the balls included with the game. Do not use hard balls or other hard objects.