

Safety Instructions

- 1. Use only under adult supervision.
- 2. Be sure that there is plenty of clearance between the player and spectators.
- 3. Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected or errant hit.
- 4. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.

5. <u>NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!!</u>

- 6. Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down causing injury.
- 7. Use only rubber chickens included with the game. Do not use hard balls or other hard objects.

Twister Display

49207 Calcutta Smith Ferry Road

East Liverpool, Ohio 43920

1 800 637-3656 — 1 (330) 386-1270

www.twisterdisplay.com