

Safety Instructions

1. Be sure to read the safety instructions included with the pump before use.

2. Before each use, inspect the power cord for any nicks or bad places in the insulation.

3. As always, use extreme caution when using electrical items near water.

4. The pump is supplied with a grounding conductor. To reduce the risk of electrical shock, be certain that it is connected to a properly grounded grounding type receptacle. DO NOT REMOVE THE THIRD PRONG FROM THE PLUG.

5. Do not use an extension cord.

6. Be sure that the power cords run behind the unit and do not pose a trip-hazard.

7. Be sure to continually mop up any water that is splashed onto the floor, to avoid any slip hazard.

8. Do not pull the pump out of the water by its cord when the pump is operating or connected to the power source.

9. <u>NEVER USE THE GAME IN STRONG WINDS OR LIGHTEN-</u> ING!!

10. <u>NEVER LEAVE THE TUB UNATTENDED WITH ANY</u> <u>AMOUNT OF WATER IN IT.</u>

1 800 637-3656 ~ www.twisterdisplay.com