

How to replace a dunk tank seat




Tools Required

- Clamps
- Marker
- Drill (5/16" bit)
- Ratchet (1/2" socket)
- Hammer


Begin by removing the old seat, and take a moment to inspect trigger mechanism to insure that it is functioning properly.

Put new seat in place.


Center seat directly over the trigger mechanism, and clamp in place.

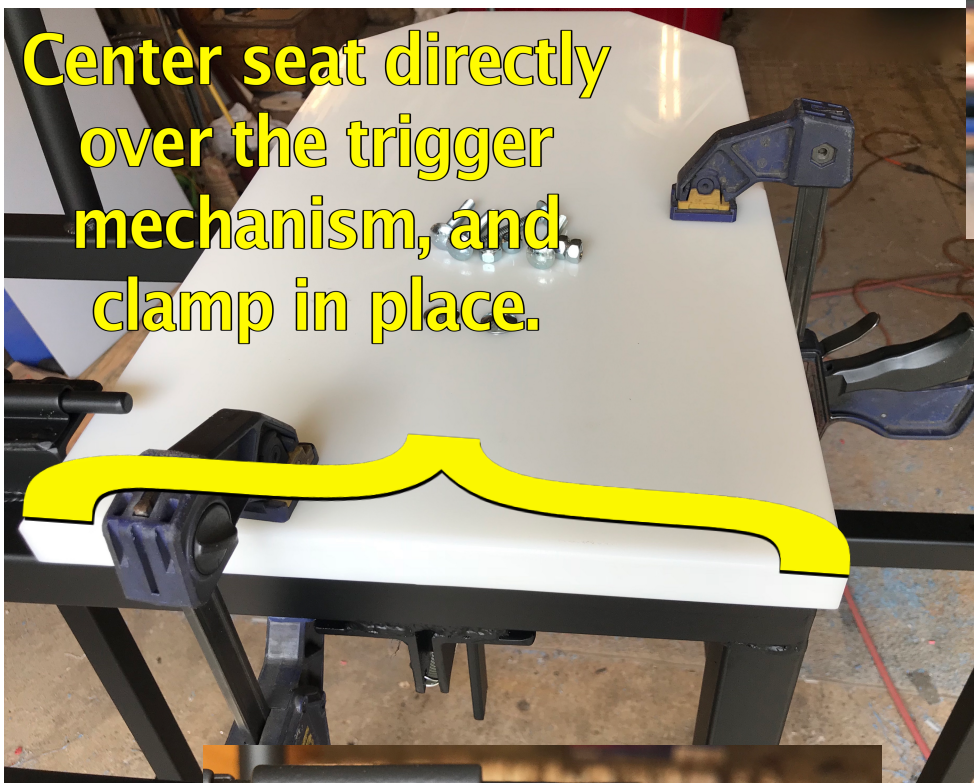

Lock seat latch in place, making sure is not leaning forward or backward.

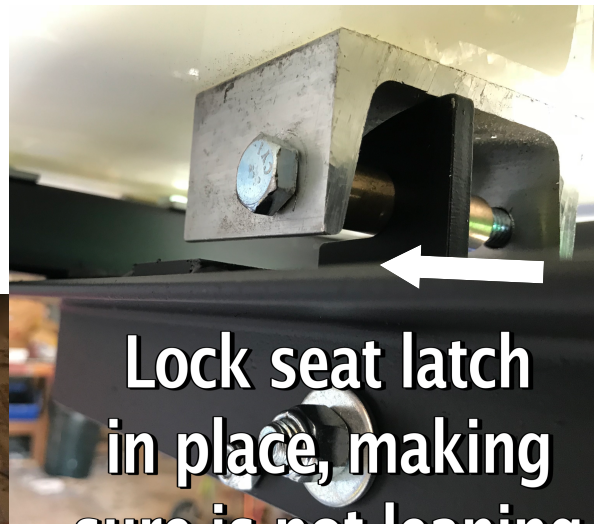

Use existing shim, if present.

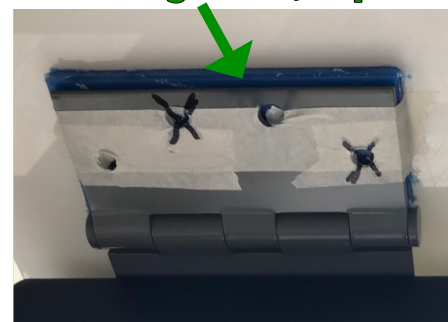


Leave at least a 1/8" gap between the seat and the safety latch.



WARNING: Do not leave enough space for a finger to get caught

NOTE: There are 4 holes per hinge. You will only use 2 holes per hinge. Use the hole pattern pictured. Holes should not be all in a straight line.

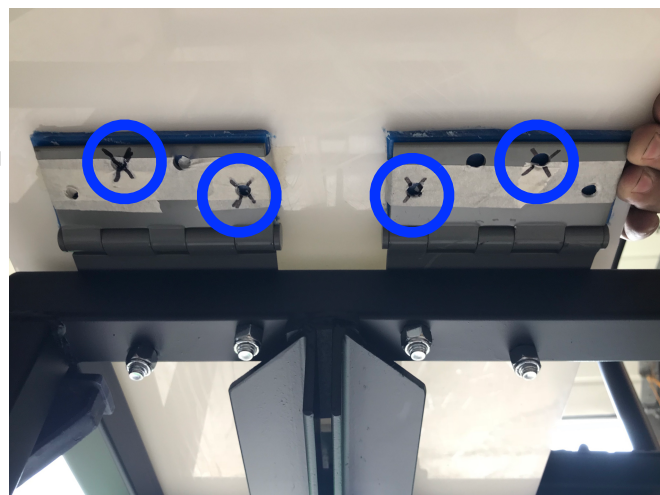

You can either...



**mark the holes,
remove the seat,
and drill,**

Or...



**leave the seat on
the frame, and drill
from underneath.**





Tap bolts into place.



**Using a 1/2" socket,
tighten nuts.**



**Throroughly test the new seat
and trigger mechansim.**