

## **Safety Instructions**

- 1. Use only under adult supervision.
- 2. Be sure that there is plenty of clearance between the player and spectators.
- 3. Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected or errant throw.
- If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.

## 5. NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!!

- 6. Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down causing injury.
- 7. Use only the light weight, plastic food items included with the game. Do not use hard balls or other hard objects.

## **Twister Display**

49207 Calcutta Smith Ferry Road East Liverpool, Ohio 43920 1 800 637-3656 — 1 (330) 386-1270 www.twisterdisplay.com