

# Pumpkin Pitch

## Safety Instructions

1. Use only under adult supervision.
2. Be sure that there is plenty of clearance between the player and spectators.
3. Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected or errant kick.
4. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
5. **NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!!**
6. Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down causing injury.
7. Use only the balls included with the game. Do not use hard balls or other hard objects.

## Twister Display

*49207 Calcutta Smith Ferry Road*

*East Liverpool, Ohio 43920*

1 800 637-3656 — 1 (330) 386-1270

[www.twisterdisplay.com](http://www.twisterdisplay.com)