



Instructions

Parts List


Wall A	1
Wall B	1
Wall C	1
Wall D	1
44.5" Pipe A (Tapered Pipe)	12
41.5" Pipe B (Non-Tapered Pipe)	4
51.25" Pipe C (Non-Tapered Pipe)	8
Corner Fittings	8
Monitor Screen	1
Vinyl Carrying Case (for walls)	1
Plastic Case (for pipes)	1
Heavy Duty Tote (for props)	1

Set of Props:

Brief Case	2
Red Chain	2
Pad Lock (five letter)	2
Pad Lock (four digit)	2
Rubber Chicken	2
Inflatable Sofa	2
Elf To-Do List	5
Homework Assignment	5
Letter	5
Elf Certificate	5
Santa's List	2
Various Inflatable Decorations	

Assembly Instructions

- 1.) Assemble frame per image below.
- 2.) Attach walls using the velcro straps. (Wall A is the front. Wall B is on the right. Wall C is the back. Wall D is on the left.)

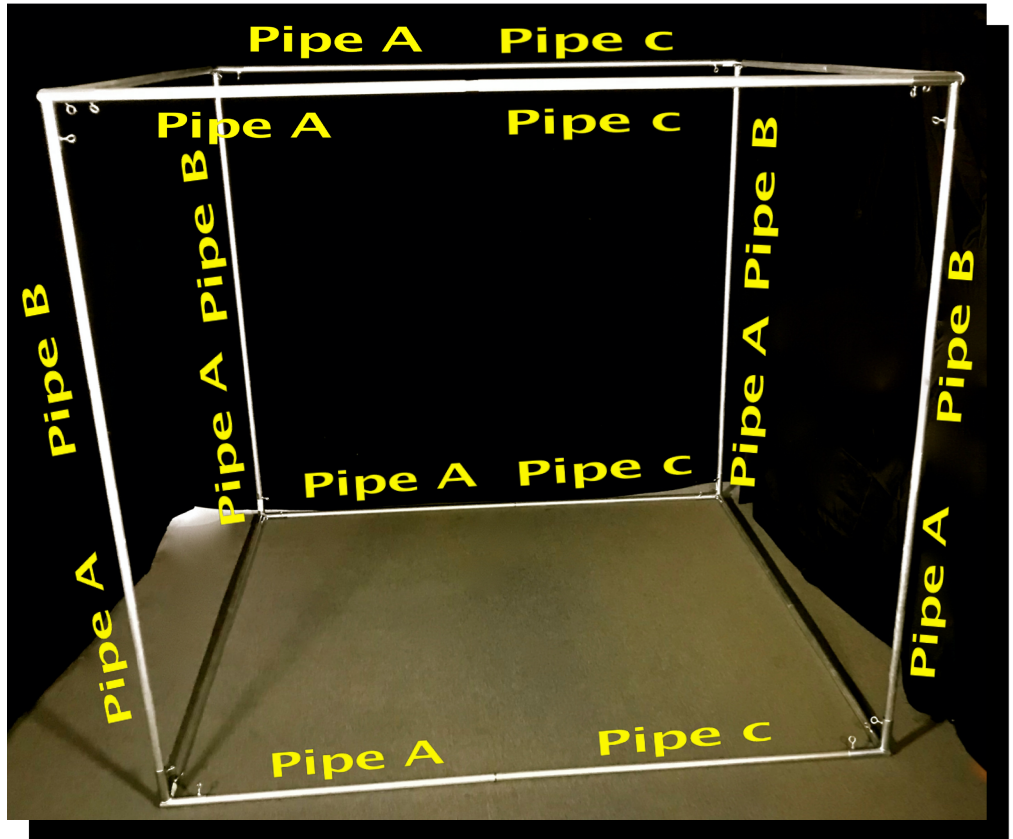

Puzzle Reset

3.) Put the following props into the brief case: homework assignment, Santa's list, elf certificate, and rubber chicken. (NOTE: The combination for the brief case should be 837-837.)



4.) Wrap the red chain around the brief case a couple of times and put the five-letter pad lock on and scramble the letters. (NOTE: The code for the five-letter pad lock should be S-A-N-T-A.)



5.) Put the sofa against wall C. Set the elf to-do list on the sofa and the brief case nearby.



6.) Place monitor on the rear wall, and run the cord to an outlet (using an extension cord if necessary). Tape down any loose cords.

7.) Use the remote to play the video. (Restart video as each new group enters.

8.) Put the four-digit pad lock on the front door. (NOTE: The combination for the four-digit pad lock should be 9627.)



Safety Instructions

1. Use only under adult supervision
2. Keep spectators clear from the sides and back of unit.
3. NEVER USE THE GAME IN STRONG WINDS OR LIGHTNING!!
4. Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down causing injury.