

CHEF CHALLENGE

Safety Instructions

1. Use only under adult supervision.
2. Be sure that there is plenty of clearance between the player and spectators. **Be sure players use great caution when flipping the spatula to avoid hitting themselves or spectators.**
3. Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected or errant hit.
4. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
5. **NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!!**
6. Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down causing injury.
7. Use only the rubber shrimp included with the game. Do not use hard balls or other hard objects.

Twister Display

49207 Calcutta Smith Ferry Road

East Liverpool, Ohio 43920

1 800 637-3656 — 1 (330) 386-1270

www.twisterdisplay.com