

SPEED PITCH

Packing List

| DESCRIPTION | QUANTITY |
|-------------|----------|
|-------------|----------|

STORAGE/CARRYING CASE 3

CASE #1

“THREE-WAY” CORNER FITTINGS 8
“COUPLER” FITTINGS 16
LENGTHS OF TUBING (47”) 10

CASE #2

LENGTHS OF TUBING (47”) 9
VINYL CANVAS BACKDROP 1
VINYL CANVAS BANNER “Guess Your Speed” 1
BALL BUNGEEES 100
BASEBALLS 12

CASE #3

LENGTHS OF TUBING (47”) 9
NETTING 1
“SPEEDCHECK” RADAR UNIT 1
AC ADAPTER 1

SHADE BOX 1

TWISTER DISPLAY

P.O. BOX 2704 – EAST LIVERPOOL, OH 43920
PHONE (330) 386-1270 FAX (330) 386-0418
ORDER DESK: (800) 637-3656

EMAIL sales@twisterdisplay.com

SPEED PITCH

Assembly Instructions

YOU WILL NEED TO SUPPLY: **STEP LADDERS**
 6 AA BATTERIES (IF AC POWER IS
 UNAVAILABLE)

1. Select a level area to operate game with plenty of room to allow for a line to form.
2. Assemble four 141" sections using three 47" lengths and two couplers each.
3. Assemble eight 94" sections using two 47" lengths and one coupler each.

[NOTE: Be sure to securely tighten down the fittings so they don't slip out during assembly, possibly causing injuries.]

4. Add a corner piece to both ends of each 12' section.
5. Insert the 94" sections into the remaining two openings of each corner piece. When this is complete, it will create a 141" X 94" X 94" cube.
6. Toss the netting over one of the long sides, across the top, and pull it down the other side. Adjust it so it is even on both sides.
7. Using the ball bungees, attach the netting to the bottom long sections (the netting will stretch). Also attach the netting to the front left section, the front top section, and the front right section.
8. Using the Ball-Bungees, attach the back-stop canvas to the back of the unit. (These same Bungees can be fed through the netting to attach it to the back top & back side sections.)

[NOTE: Your canvas is powdered to prevent it from sticking together during shipment. Simply remove powder with a dry cloth.]

9. Insert the short piece of tubing into the "tee" fitting. Using two Velcro straps, attach the radar unit to it.
10. Attach banner to the front top section.
11. When re-packing, evenly distribute tubing between the cases. Also, roll up the netting as tightly as possible.

TWISTER DISPLAY

P. O. BOX 2704 – EAST LIVERPOOL, OH 43920
PHONE (330) 386-1270 FAX (330) 386-0418
ORDER DESK: (800) 637-3656

EMAIL sales@twisterdisplay.com

~~*SPEED PITCH*~~

Safety Instructions

1. Be sure that there is plenty of clearance between the pitcher and spectators.
2. Do not allow the pitcher to be more than 10' in front of the unit.
3. **NEVER ALLOW SPECTATORS TO CROSS IN FRONT OF PITCHING AREA AT ANY TIME.** It is advised that this area be roped off.
4. Make sure that the netting is securely fastened to the framework so no balls can slip through.
5. Keep spectators clear from the sides and back of unit to prevent them from being struck by a deflected or errant throw.
6. **NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!!**
7. Use caution when setting up or taking down the game. Once the bolts are loosened the sections of tubing can come apart and fall down causing injury.
8. Use only the soft baseballs included with the game.

TWISTER DISPLAY

P.O. BOX 2704 – EAST LIVERPOOL, OH 43920
PHONE (330) 386-1270 FAX (330) 386-0418
ORDER DESK: (800) 637-3656

EMAIL sales@twisterdisplay.com

CANVAS CARE


1. If game becomes wet, dry thoroughly before storing.
2. Fold the canvas INWARD to help protect and keep it clean.
3. Canvas can be cleaned with rubbing alcohol when necessary. On the Velcro, clean the hook and loop fabric with dry brush to knock out the dirt.

TWISTER DISPLAY

**P.O. BOX 2704 – EAST LIVERPOOL, OH 43920
PHONE (330) 386-1270 FAX (330) 386-0418
ORDER DESK: (800) 637-3656**

EMAIL sales@twisterdisplay.com

SPEED PITCH

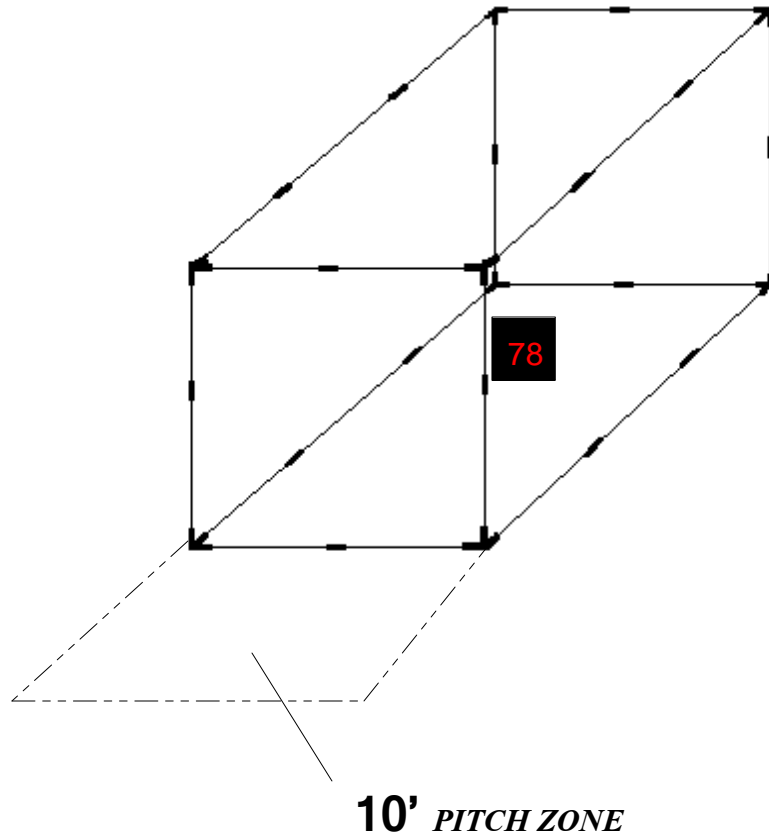

10' PITCH ZONE

TWISTER DISPLAY

P.O. BOX 2704 – EAST LIVERPOOL, OH 43920

PHONE (330) 386-1270 FAX (330) 386-0418

ORDER DESK: (800) 637-3656

EMAIL sales@twisterdisplay.com