

# The **BIG SPLASH**


## **Set-Up & Safety Instructions**



**1 800 637-3656**

**[www.twisterdisplay.com](http://www.twisterdisplay.com)**


# Parts List

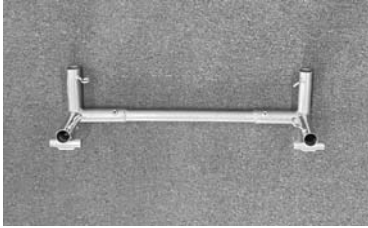


*Base Unit: Quantity-1*



*Corner Fitting:  
Quantity-7*

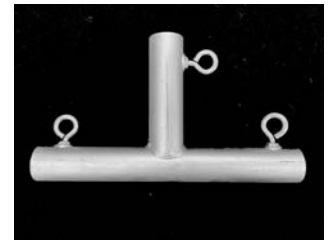


*Tee Fitting:  
Quantity-1*

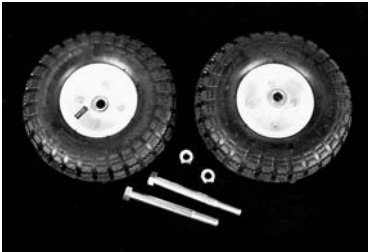

*Tires (with 5/8 bolts  
and lock nuts):  
Quantity-2*



*24" Pipe: Quantity-2*

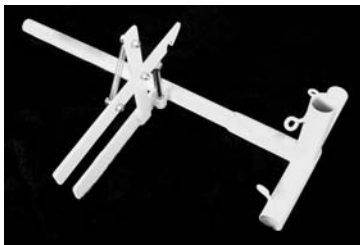

*Trigger Unit:  
Quantity-1*



*44.5" Tapered Pipe: Quantity-4*



*41.5" Pipe: Quantity-8*




*Bucket Assembly:  
Quantity-1*




*Target Cross Brace: Quantity-1*



*Collar: Quantity-1*

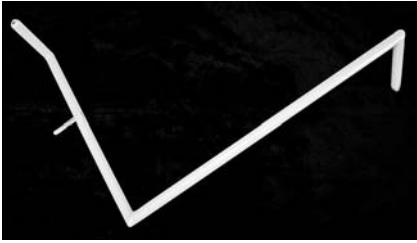

*Target Arm: Quantity-1*

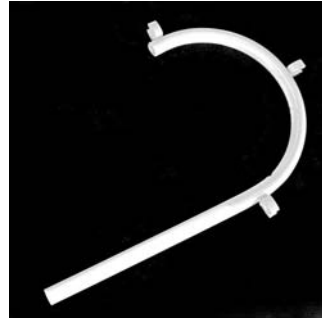

*Filler Tube Hook:  
Quantity-1*



*Target: Quantity-1*



*Filler Tube:  
Quantity-1*



*Filler Tube  
Clips:  
Quantity-3*





*Sponge Balls:  
Quantity-12*




*Vinyl Canvas:  
Quantity-1*

# ***Assembly Instructions***


**Attach two 41.5" inch pipes to the base unit. Then, using two corner fittings, attach a 24" inch pipe to create a rectangle, as pictured.**

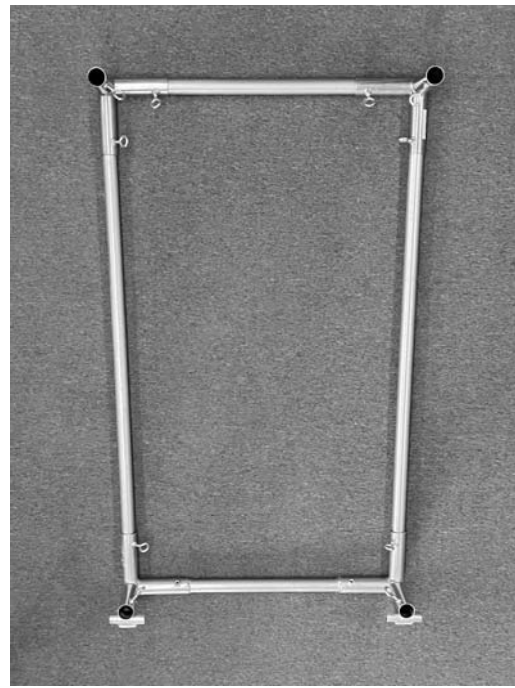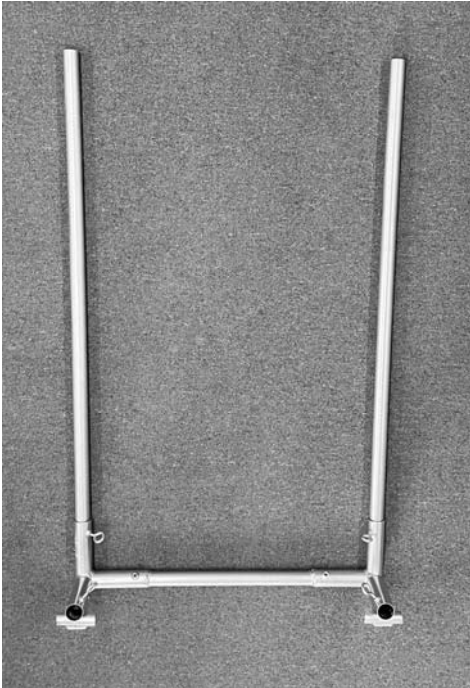


**Attach tires to the base unit, with the 5/8" bolt and lock nut. (The nut goes on the inside side of the tire.)**

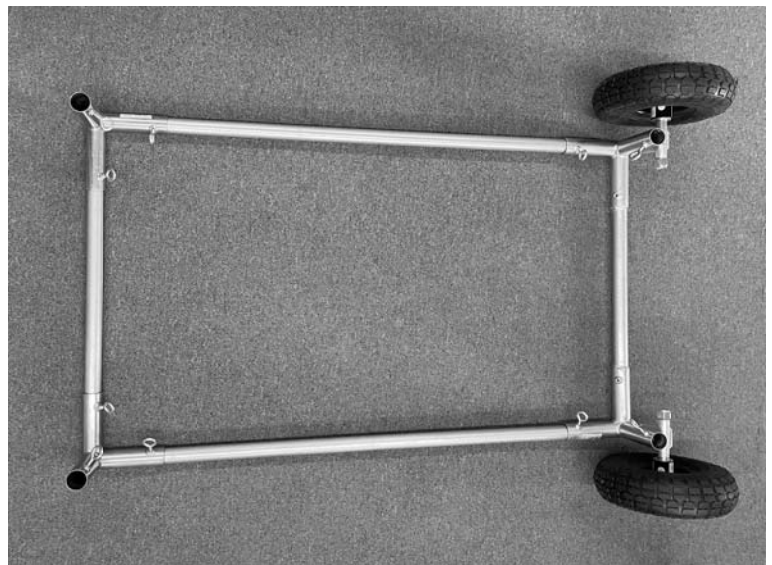

# Assembly Instructions

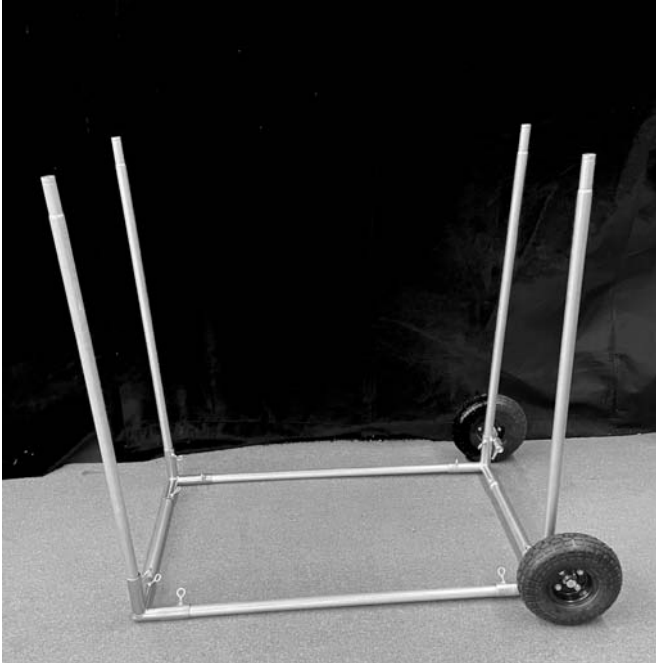


Insert a 44.5" tapered pipe in each corner fitting of the base unit. (The tapered end goes up.)

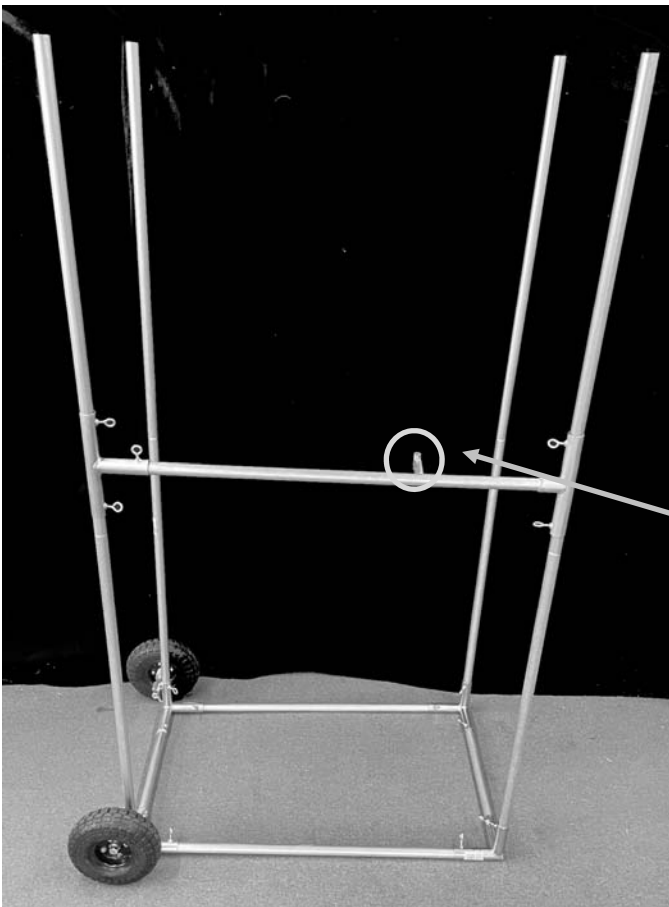


Insert a 41.5" pipe onto each tapered pipe .

Put the target arm cross brace onto the two front pipes.


**IMPORTANT NOTE:** *The arm pivot tube goes on the inside and is on the opposite side from the wheels.*

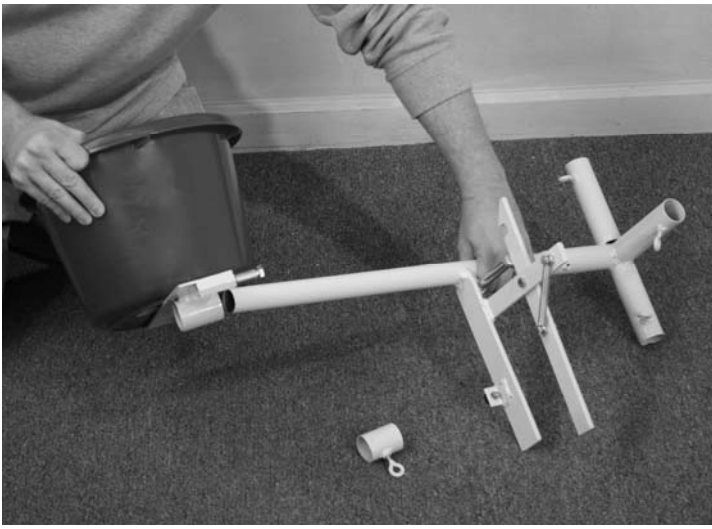

**Slide the bucket assembly onto the trigger unit. Make sure that it is positioned so that the roller engages with the trigger hook.**

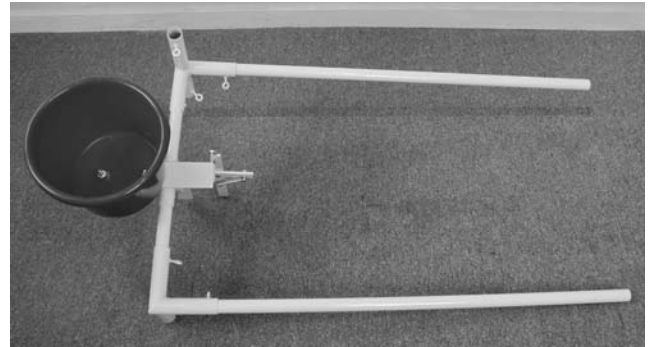


**Insert the remaining 41.5" pipes into the corner fitting and tighten.**

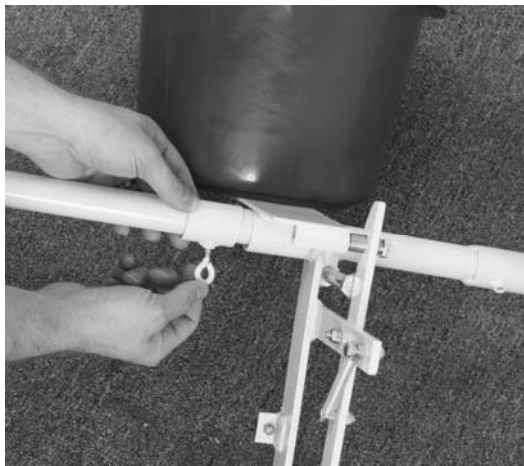

**Slide on the collar and tighten.**





**Place the remaining two corner fittings onto either end of the 24" pipe. Be sure to slide them completely on, but do not tighten. Attached these corner fittings to the opposite ends of the 41.5" pipes. (Leaving the corner fittings loose will help to guide them onto the pipes.) Tighten all fittings.**

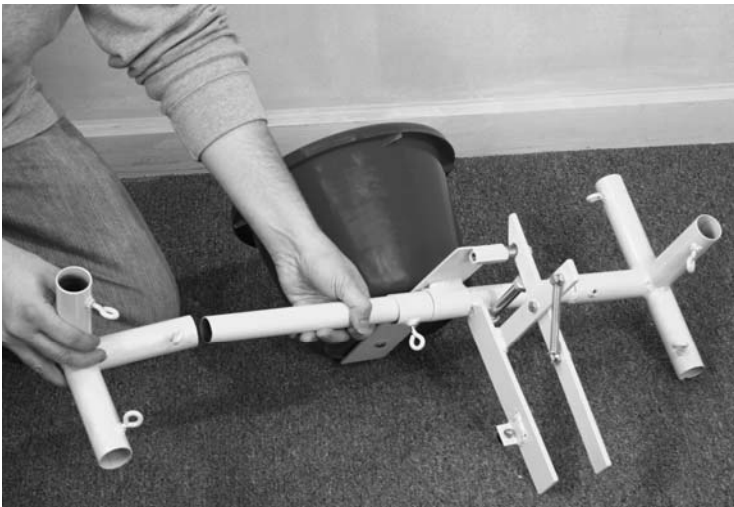

**Slide on a corner fitting and tighten.**



**Tip the unit onto its side. Block the tires and find items to elevate the unit about a foot or so. Place the top on the unit, and tighten.**

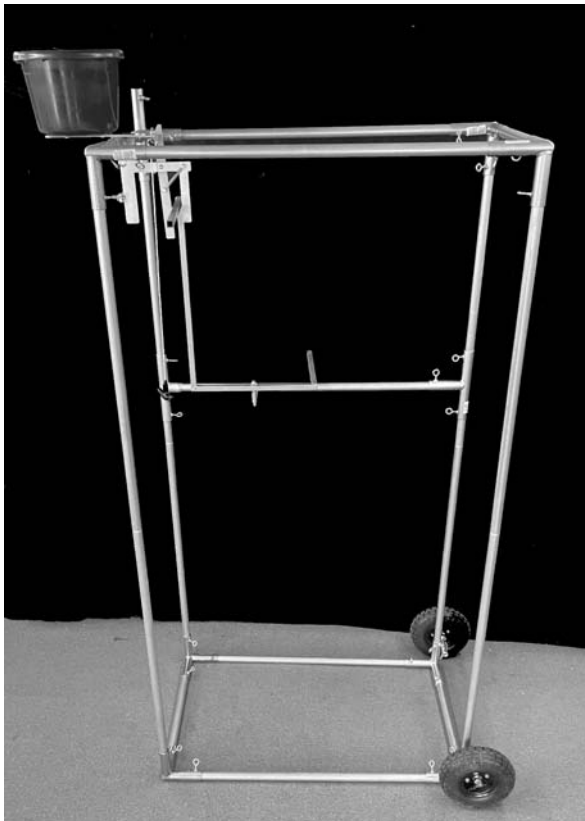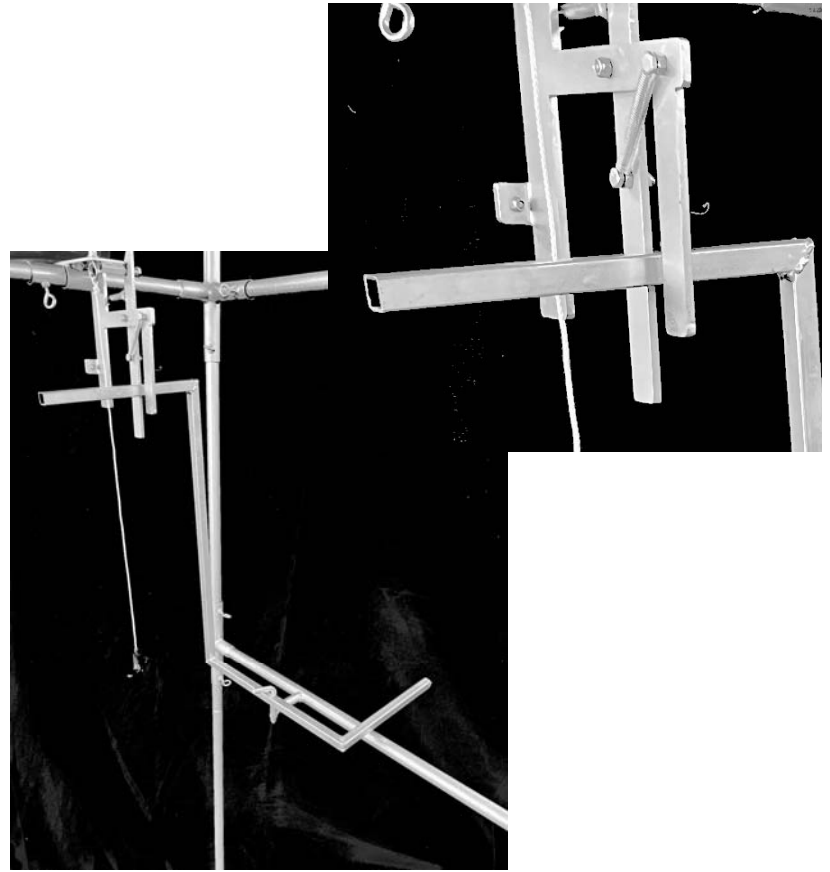

**Drop arm pin into pivot tube. Be sure to slide the top of the arm between the latch plate and the vertical plate on the trigger unit.**





**Insert filler tube hook and tighten.**



**Attach the garden hose to the connector/valve.**



**Attach filler tube. To the hook.  
Use the clips to route the filler tube along the frame.**



**Attach the canvas to the frame with the Velcro straps.**





# **Safety Instructions**

- ◆ *Never use baseballs or hard balls. (Use only the balls provided.)*
- ◆ *Set up on level ground.*
- ◆ *Keep Big Splash staked and/or sandbagged for stability.*
- ◆ *Keep Big Splash away from electricity.*
- ◆ *Never stand under the bucket when in use.*
- ◆ *Do not allow anyone to climb on or lean against the Big Splash.*
- ◆ *Do not allow anyone to hit the target with their hand.*
- ◆ *Take down the Big Splash if there is high wind or chance of lightening.*

**1 800 637-3656**

**[www.twisterdisplay.com](http://www.twisterdisplay.com)**